

## POLYAMIDE 11 COATINGS

### ABRASION RESISTANCE STUDY



## Polyamide 11 coatings show superior abrasion resistance compared to other coatings used in the mining industry

Fisher Company of North Salt Lake, Utah developed a unique abrasion test for the mining industry to more accurately determine expected performance.

Fisher Company, an Approved Coating Applicator for Rilsan® fine powders, devised and performed a special test for comparing the abrasion resistance of different coatings. As seen in the image to the right, a container was filled with an aggressive slurry (50:50 water and red garnet blast media). Coated impellers were then spun in the mixture until the underlying metal was exposed. The failure time was precisely captured by a timer connected to an apparatus that sent a current through the water. When the metal substrate was exposed, the electrical circuit was closed, triggering a switch to stop the timer. Several types of thermoplastic and thermoset coatings were evaluated using this method.

### Conclusions from the test


After testing three samples for each type of coating, the average minutes to failure per mil of coating was calculated. In this test, Rilsan® polyamide 11 coatings were shown to have better abrasion resistance than competitive coating solutions. The study continues as Fisher carries out tests on more polymeric coatings.



Test apparatus



(left) worn epoxy coated impeller  
(right) Rilsan® PA11 coated impeller

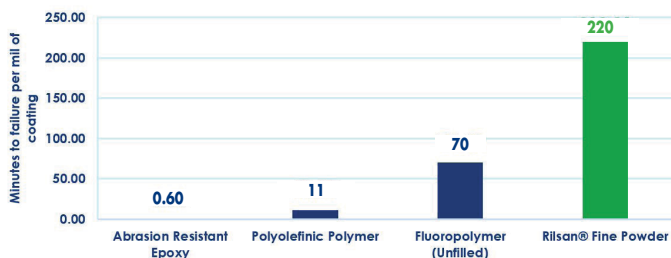

## Rilsan® fine powders for mining

A highly abrasion resistant coating extends the service life of metal equipment used in the mining industry, such as centrifugal pumps, rollers, weirs, and pipes. The superior abrasion resistance of Rilsan® polyamide 11 coatings compared to a "highly abrasion resistant" epoxy coating can lead to much less maintenance, re-coating, and downtime. This study conducted by Fisher Company, showed that the epoxy coating provided less than one minute of protection per mil of coating applied. Meanwhile, the Rilsan® powder coating provided over 200 minutes of protection per mil of applied coating.

## Versatile application processes

Because Rilsan® polyamide coatings are a thermoplastic resin, it allows for an easy application process in a variety of scenarios. Rilsan® fine powders can be electrostatically sprayed, hot flocked, fluid bed dipped, flame sprayed, and minicoated (for very small parts). Depending on the type of metal being coated and the dimensions of the part, at least one of these processes will be suitable for applying the polyamide 11 coating.

## Powerful by nature

Polyamide 11 is a biobased polymer derived from castor oil, making this product a green solution. Long-chain polyamides are generally more chemical resistant and flexible, while having lower density and moisture absorption compared to short-chain polyamides like PA6 and PA66. This PA11 backbone give Rilsan® fine powder coatings their strong mechanical properties and chemical resistance, is the right choice for mining equipment.

For more information about Rilsan® powder coatings, please contact your local Arkema representative.

To have a Rilsan® powder coating applied to your equipment, please contact Fisher Company.

The statements, technical information and recommendations contained herein are believed to be accurate as of the date hereof. Since the conditions and methods of use of the product and of the information referred to herein are beyond our control, ARKEMA expressly disclaims any and all liability as to any results obtained or arising from any use of the product or reliance on such information; NO WARRANTY OF FITNESS FOR ANY PARTICULAR PURPOSE, WARRANTY OF MERCHANTABILITY OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, IS MADE CONCERNING THE GOODS DESCRIBED OR THE INFORMATION PROVIDED HEREIN. The information provided herein relates only to the specific product designated and may not be applicable when such product is used in combination with other materials or in any process. The user should thoroughly test any application before commercialization. Nothing contained herein constitutes a license to practice under any patent and it should not be construed as an inducement to infringe any patent and the user is advised to take appropriate steps to be sure that any proposed use of the product will not result in patent infringement. See SDS for Health & Safety Considerations. Arkema has implemented a Medical Policy regarding the use of Arkema products in Medical Devices applications that are in contact with the body or circulating bodily fluids: (<http://www.arkema.com/en/social-responsibility/responsible-product-management/medical-device-policy/index.html>).

Arkema has designated Medical grades to be used for such Medical Device applications. Products that have not been designated as Medical grades are not authorized by Arkema for use in Medical Device applications that are in contact with the body or circulating bodily fluids. In addition, Arkema strictly prohibits the use of any Arkema products in Medical Device applications that are implanted in the body or in contact with bodily fluids or tissues for greater than 30 days. The Arkema trademarks and the Arkema name shall not be used in conjunction with customers' medical devices, including without limitation, permanent or temporary implantable devices, and customers shall not represent to anyone else, that Arkema allows, endorses or permits the use of Arkema products in such medical devices. It is the sole responsibility of the manufacturer of the medical device to determine the suitability (including biocompatibility) of all raw materials, products and components, including any medical grade Arkema products, in order to ensure that the final end-use product is safe for its end use; performs or functions as intended; and complies with all applicable legal and regulatory requirements (FDA or other national drug agencies) It is the sole responsibility of the manufacturer of the medical device to conduct all necessary tests and inspections and to evaluate the medical device under actual end-use requirements and to adequately advise and warn purchasers, users, and/or learned intermediaries (such as physicians) of pertinent risks and fulfill any postmarket surveillance obligations. Any decision regarding the appropriateness of a particular Arkema material in a particular medical device should be based on the judgment of the manufacturer, seller, the competent authority, and the treating physician.

Rilsan® is a registered trademark of Arkema

© 2016 Arkema Inc. All rights reserved.

[rilsanfinepowders.com](http://rilsanfinepowders.com)

### Fisher Company

955 North Main Street  
North Salt Lake, Utah, 84054  
(+1)801-298-2570  
[fisherutah.com](http://fisherutah.com)

### Contact Information

China: +86 21 61476888  
Japan: +81 3 5251 9900  
Korea: +82 2 370367000  
Singapore: +65 64199199  
Taiwan: +886 2 27476979  
India: +91 22 66137500

### Arkema Inc.

900 First Avenue  
King of Prussia, PA 19406  
USA  
Tel.: (+1) 610-205-7000  
[arkema-inc.com](http://arkema-inc.com)

### Headquarters: Arkema France

420, rue d'Estienne d'Orves  
92705 Colombes Cedex – France  
Tel.: +33 (0)1 49 00 80 80  
Fax: +33 (0)1 49 00 83 96  
[arkema.com](http://arkema.com)

**ARKEMA**  
INNOVATIVE CHEMISTRY